



1. **Chipcard reader**,
for personal identification, name handling and speaker lists
2. **Indicator light**,
red LED for indication that chipcard-mode is activated
3. **LC-Display (2x40 characters)**,
to display settings and messages
4. **Connector socket (Minicon)**,
for microphone connection (TM58/6)
5. **Built-in loudspeaker**,
for monitoring the original
6. **Mini jack connector (3.5 mm)**,
for headphone connection
7. **Voting buttons**,
for voting and evaluation,
very good (++), good (+), abstention (?), bad (-)
and very bad (--)
8. **Volume control**,
buttons for volume adjustment of the relay channel
9. **Channel selector buttons (<ch>)**,
to select relay channel,
shown on display
10. **Button (mute all)**,
to mute all active delegates' units
10. **Microphone push button switch (ON/OFF)**,
for on/off operation of the microphone,